

**Sandberg®**  
**ACTIVE** 

# Survivor Powerbank 20100


Quick guide

420-36



[www.sandberg.world](http://www.sandberg.world)

## Charge Powerbank

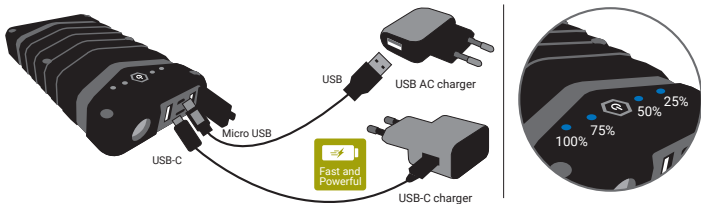

## Flashlight procedure



1. Press twice



2. Press once more for dimmed light



3. Press once more for flashing



4. Press once to turn off

## SOS light procedure



1. Press twice



2. Hold down for SOS

## Charge devices



Charge one smartphone and one tablet or two smartphones by USB-A.



Or charge one smartphone or one tablet by USB-C.



Support

<http://helpdesk.sandberg.world>

## Warranty

There is a five-year warranty on your Sandberg product. Please read the warranty terms and register your new Sandberg product at [www.sandberg.world/warranty](http://www.sandberg.world/warranty)

**5**  
Years  
Warranty

Capacity: 20000 mAh / 74 Wh Item no. 420-36B

Micro USB input : 5V/2A, 9V/2A

USB-C Input: 5V/3A, 9V/2A PD18W

USB-C Output: 5V/3A, 9V/2.2A, 12V/1.67A PD20W

USB-A Outputs: 5V/3A, 9V/2A, 12V/1.5A,

SSCP10V/2.25A, 22.5W

Product weight: 477g

Made in China

[www.sandberg.world](http://www.sandberg.world)

[info@sandberg.world](mailto:info@sandberg.world)

Sandberg A/S

Bregnerødvej 133D,

3460 Birkerød, Denmark



**NOTE:** For optimal battery performance, we recommend fully discharging and recharging the powerbank at least once every three months.



For information on handling electronic waste, see [www.sandberg.world/weee](http://www.sandberg.world/weee)