

Sandberg®
ACTIVE

Laptop Powerbank 27000 PD100W


Quick guide

421-13



www.sandberg.world

Overview

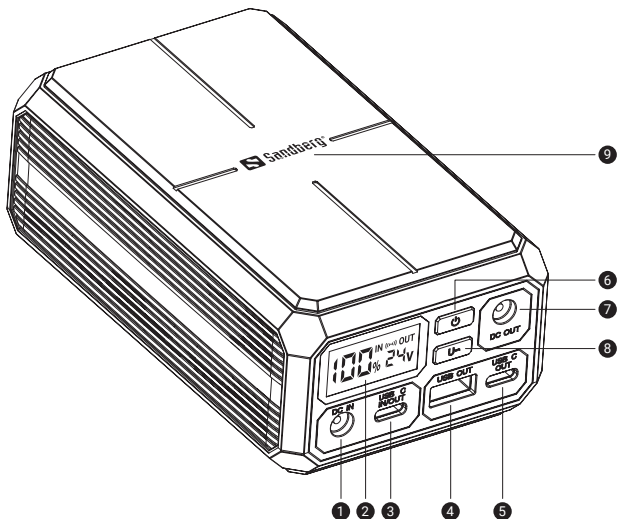


1. DC Input
2. LED display
3. USB-C 1 Input/Output

4. USB-A Output
5. USB-C 2 Output
6. Power button

7. DC Output
8. Laptop Voltage button
9. Wireless charging Area

Charge the powerbank

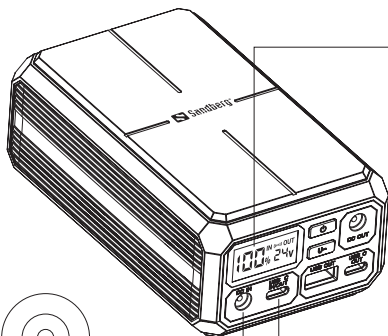

100%

Display indicating the charged capacity of the battery.

DC Input: 12-24V/3A (72W max)

USB-C Input: PD


DC/PD Input



Solar Panel
Charger




Wall
Charger

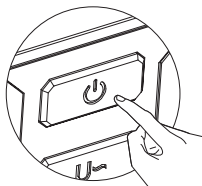


Press once to check the capacity status

Charge mobile device (USB-A and USB-C 2 Output)

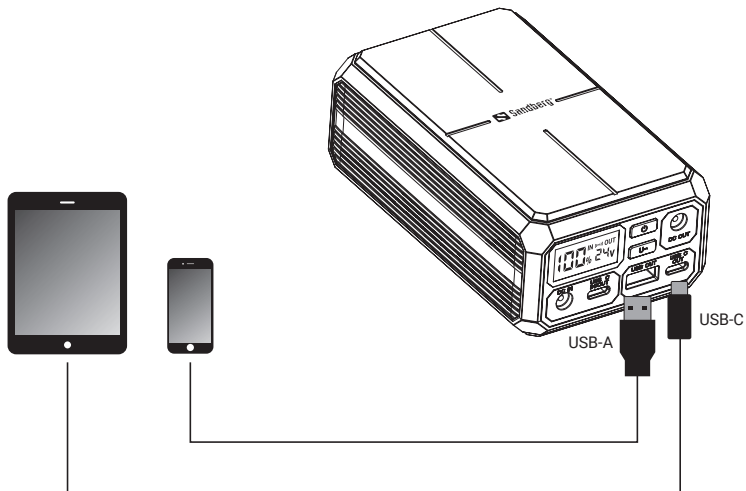


Charge laptop (DC or USB-C 1 Output)

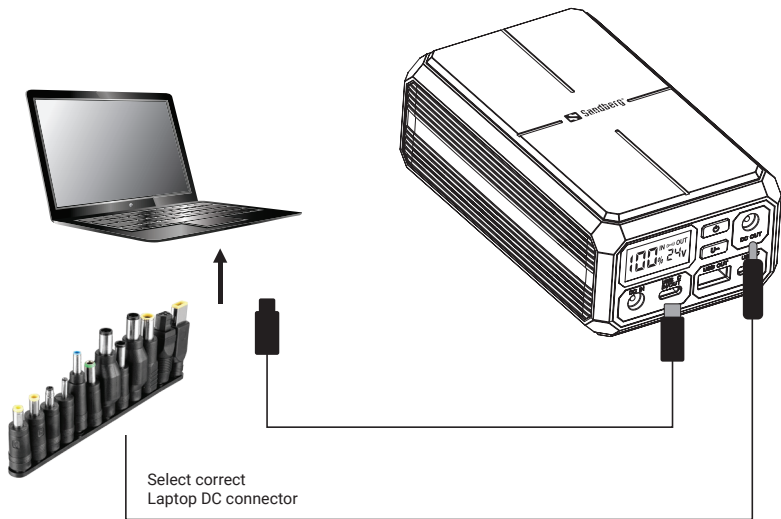

Charging a laptop with DC cable - important note

1. Choose correct tip to fit the DC port of your laptop.
2. Set the correct voltage on the power bank:
Keep long press on the Laptop Voltage button until display is flashing.

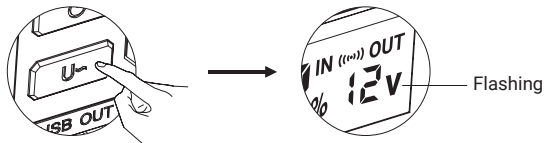


Click Laptop Voltage button short to step between Voltage 12V/16.5V/20V/24V.



3. Connect the laptop, charge will start.
4. After disconnecting the laptop, you need to set the Voltage next time.
For safety it will always start the cycle at lowest setting 12V.

NOTE: If you are in doubt on what DC-Voltage to choose, have a look at the label on the AC charger for the laptop.

Wireless charger

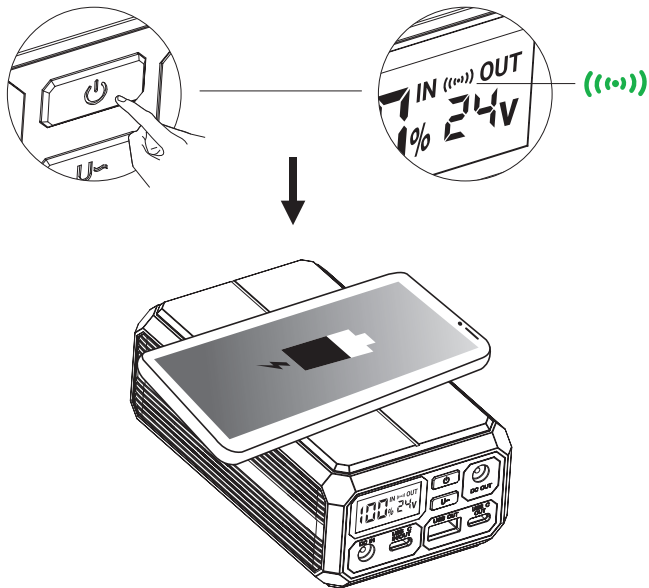

Warranty

There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new Sandberg product at www.sandberg.world/warranty

5

Years
Warranty

Laptop Powerbank 27000 PD100W

Item no. 421-13

Battery capacity: 27000 mAh / 99.9 Wh / 3.7V

Battery pack capacity: 22.2V/4500 mAh/99.9 Wh

DC-port input: 12-24V/3A (72W max)

DC-port output: 12V/5A, 16.5V/4A, 20V/3.5A, 24V/3.5A (84W max)

USB-C PD input: 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3A (60W max)

USB-C PD output: 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/5A (100W max)

USB-A output: 4.5V/5A, 5V/4.5A, 9V/2A, 12V/1.5A (22.5W max)

USB-C (2) output: 5V/3A, 9V/3A, 12V/2.5A (30W max)

Wireless charger max. 10W

Product weight: 589g

www.sandberg.world

Sandberg A/S

Bregnerødvej 133D,

3460 Birkerød, Denmark



Made in China

PLEASE READ

This battery stays on in DC mode to ensure constant power.
When not in use, hold the power button for 3 seconds to turn it off.
If left on, the battery may slowly drain. Then recharge it when needed.

NOTE: For optimal battery performance, we recommend fully discharging and recharging the powerbank at least once every three months.

