



Face-ID Webcam Mini



Quick guide

134-43




www.sandberg.world

Overview

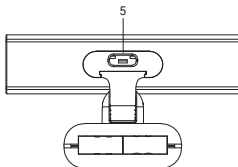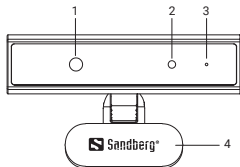


- 1. Camera lens
- 2. IR Sensor
- 3. Microphone


- 4. Adjustable mount
- 5. USB-C interface
- 6. USB-A to USB-C cable

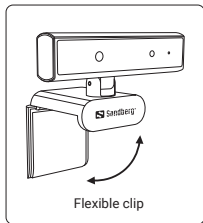


Connection

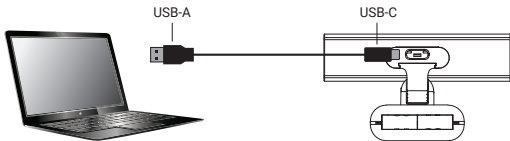

Mounting

 

On a Desk

 


On a PC Monitor




On a tripod, for example
Sandberg item no. 134-11

Setting Up Windows Hello function

 1) Open "Settings" and click on "Accounts", then "Sign-in options".



 2) Set up a PIN code.



Sign-in options

Manage how you sign in to your device

Select a sign-in option to add, change, or remove it.

Windows Hello Face

Sign in with your camera (Recommended)

Windows Hello Fingerprint

This option is currently unavailable—click to learn more

Windows Hello PIN

Sign in with a PIN to use

You can use this PIN to

Learn more

Security Key

Sign in with a physical key

Password

Sign in with your account's password

Picture Password

Swipe and tap your favorite photos to unlock your device

Picture Password

Swipe and tap your favorite photos to unlock your device

Require sign-in

If you've been away, when should Windows require you to sign in again?

When PC wakes up from sleep

Sign-in options

Manage how you sign in to your device

Select a sign-in option to add, change, or remove it.

Windows Hello Face

Sign in with your camera (Recommended)

Windows Hello Fingerprint

This option is currently unavailable—click to learn more

Windows Hello PIN

Sign in with a PIN to use

You can use this PIN to

Learn more

Security Key

Sign in with a physical key

Password

Sign in with your account's password

Picture Password

Swipe and tap your favorite photos to unlock your device

 
Picture Password

Swipe and tap your favorite photos to unlock your device


Require sign-in

If you've been away, when should Windows require you to sign in again?

When PC wakes up from sleep



 - 3) You will now see which options are available. Face option and set up.



Sign-in options

Manage how you sign in to your device

Select a sign-in option to add, change, or remove it.

Windows Hello (Face)

Sign in with your camera (Recommended)

You can sign in to Windows, apps, and services by touching Windows Hello to recognize your face.

[Learn more](#)

Set up

Windows Hello (Fingerprint)

This option is currently unavailable—click to learn more

Windows Hello (PIN)

Sign in with a PIN (Recommended)

Security Key

Sign in with a physical security key

Password

Sign in with your account's password

Picture Password


 
Draw and tap your favorite photos to unlock your device

Require sign-in

If you've been away, when should Windows require you to sign in again?

When PC wakes up from sleep

- 4) Click on "Get started".

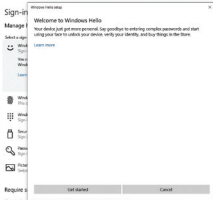


Require s


If you've been away, when should Windows require you to sign in again?

When PC wakes up from sleep

- 5) Position yourself in the center, and the camera will register your face.

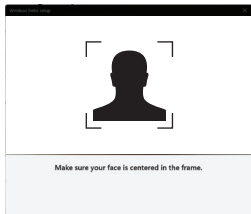

- 6) Optionally, you can improve recognition if for example you wear glasses.

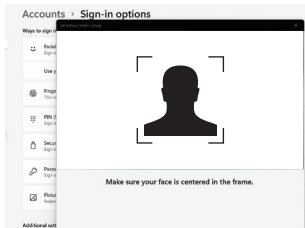

The camera works driver-less and is compatible with most chat applications.

*If you want to get further options for video-effects and image adjustments, please follow this link: **www.sandberg.world/webcamguide***



Support

<http://helpdesk.sandberg.world>

Warranty

There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new
Sandberg product at www.sandberg.world/warranty

5

Years
Warranty

Face-ID Webcam Mini

Item no. 134-43

www.sandberg.world

Sandberg A/S

Bregnerødvej 133D,

3460 Birkerød,

Denmark

Made in China



For information on handling electronic waste, see www.sandberg.world/weee